




Your new round trim kit has been painted in the standard silver metallic with black background. Both the ring and background can be painted to match your decor. Test the paint in an inconspicuous area before painting the entire unit. The back of the ring is a good area to test the paint for the ring. The area covered by the ring is a good spot to test the background paint. Allow the paint to dry completely, then check for acceptable adhesion or excessive chipping.

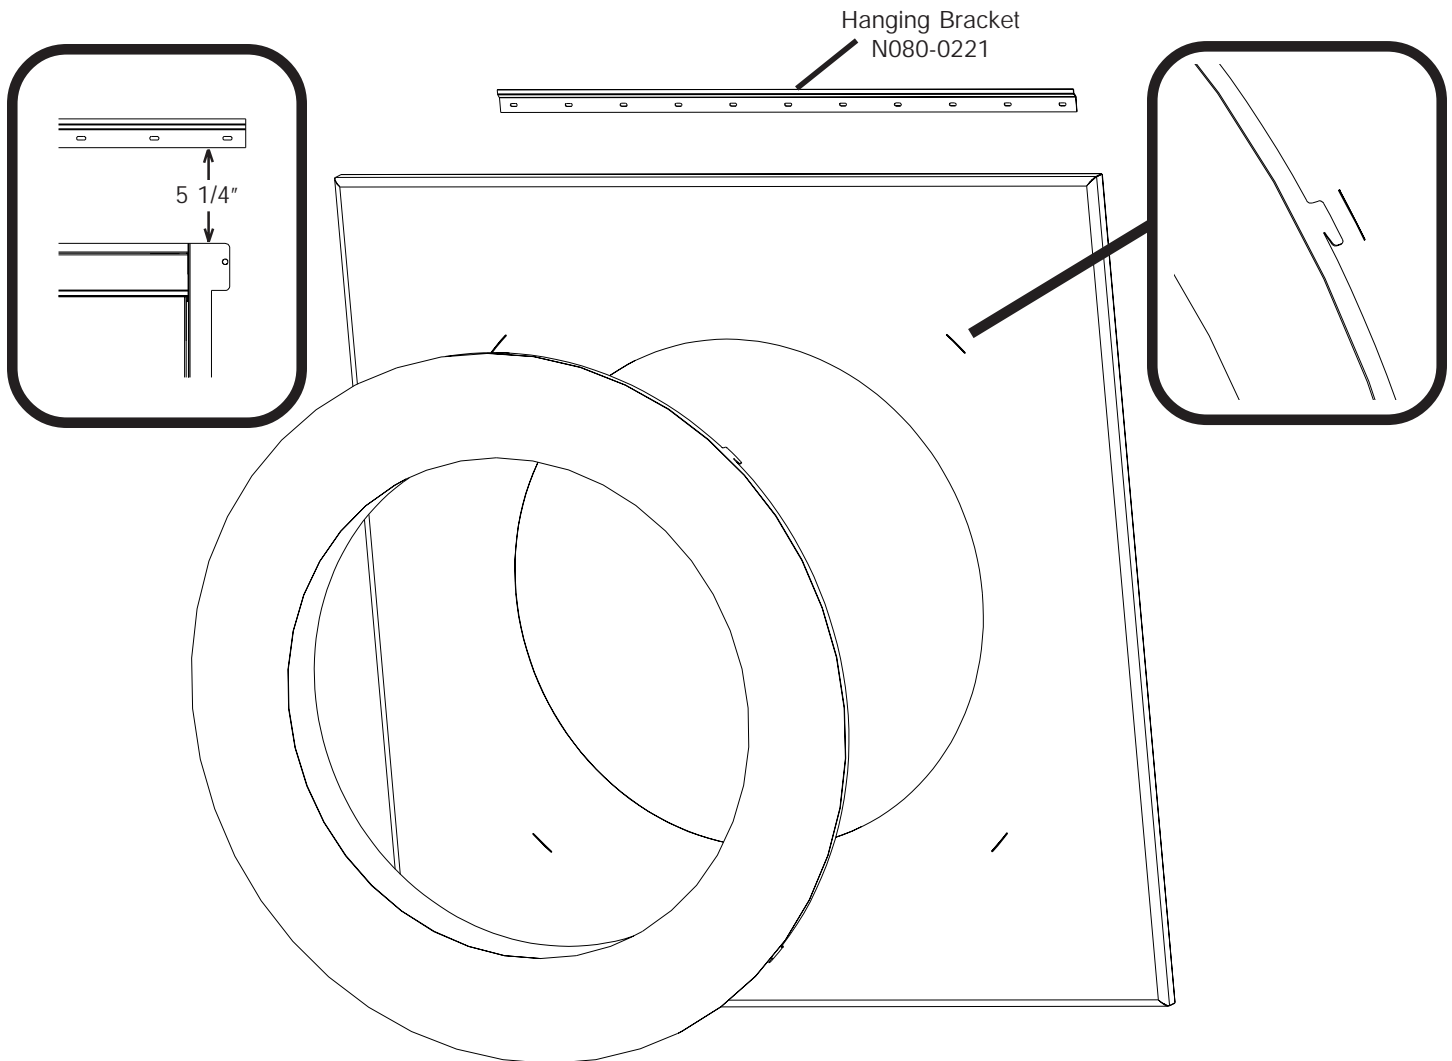

Assembly Instructions:

1. The original waterfall must be installed over the drywall surface to ensure the correct distance between the trim and the waterfall panel.
2. The round trim ring is installed at the factory. It can be removed by turning the round trim counter-clockwise. To re-install, push the tabs through the slots in the back panel and turn the trim clockwise. The round trim can be locked in place by bending the tabs over.
3. Mount the trim hanging bracket (N080-0221) on the wall with the bottom edge at 5.250" above the waterfall. Ensure the bracket has been securely fastened, with the screws (not supplied) entering the wall studs.
4. Hang the square trim on the bracket, centered left to right in front of the waterfall.